



**File Name:** bose lifestyle 38 series manual.pdf

**Size:** 4260 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 1 May 2019, 14:26 PM

**Rating:** 4.6/5 from 785 votes.

**Status:** AVAILABLE

Last checked: 11 Minutes ago!

**In order to read or download bose lifestyle 38 series manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bose lifestyle 38 series manual . To get started finding bose lifestyle 38 series manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# bose lifestyle 38 series manual

No part of this work may be reproduced, modified, distributed or otherwise used without prior written permission. Confidential Unpublished Works. SACD An abbreviation for Super Audio Compact Disc, which is used for highresolution digital audio stored on a CD sized disc. It involves use of the media center and a simple 3step procedure for storing your music. Note Your system is designed to store the tracks of regular CDs only. It will not store MP3 tracks or the contents of DVDs. As a further benefit, Bose issues update discs to keep the music databases current. So even your newest CD acquisitions will have this information available. Simply press any button. There is no need to aim the remote at the media center. Power and mute Turns the system on and off. Selects the source last used. Mutes the volume for all connected speakers main and in other rooms. Library Enters or exits the Settings menu for the current source. Enters the main menu of a cable or satellite box. Skip backward or forward to the next CD track, DVD chapter, radio preset NOT to stored music preset, or to TV channel. Chapter Preset Track. The media center The disc tray and system controls are located under the front panel door of the media center. Shows when the track or disc playing is set to repeat. Repeat Disc Shows when a disc in the disc tray is playing. Track Shows when a track is playing. With the media center turned off, use the controls on its front panel to follow these steps Press and hold the Enter button on the media center. This turns the system on and selects the source at the same time. Most of these adjustments can be made as you press the up and down arrows on the remote and press Enter to select from options that appear on the media center display. When you hear a track that is inappropriate for the selected preset, choose this minus rating to lessen your chance of hearing the track again. Press O and select Stored OD, Track Action, Delete System Track from the menu. <http://www.sonimages.de/upload/commando-alarm-manual.xml>

- **bose lifestyle 38 manual, bose lifestyle 38 user manual, bose lifestyle 38 series iv manual, bose lifestyle 38 manual pdf, bose lifestyle 38 series manual, bose lifestyle 38 series manual pdf, bose lifestyle 38 series manual download, bose lifestyle 38 series manual review, bose lifestyle 38 series manual free.**

Notice there's no identifiable order to what plays next by CD that were stored first, nor by common artist or genre. It's more like a free-wheeling stream of tracks you may or may not have heard recently. 4. While in Stored source, pressing a numbered button from 2 to 9 moves into a different preset. The music playing will change when that happens. Note You can give each preset a name, up to 8 letters long, for the person or reason for using it. How to completely clear the Playlist To use the Playlist again, for a different purpose, you may want to remove all the tracks listed there now. Note Not all DVDs offer the same features. For example, you can choose subtitles only if the disc provides subtitle information. This also turns the system on if it is off. This tunes to the FM or AM station that was last selected. Changing stations If you want. The removal is then complete. To reassign a preset to a different station. You can also designate one of these components as the video tuner channel selector for all, to further simplify operation. Figure 9 TV brand selection Choose the device code. By following the instructions below, you can set the remote to control one or the other, but not both. If you have both a VCR and a DVR, setting your remote to control the DVR will provide more control options. Turn on the TV and be sure to select the Video Input on the TV for the media center. For example, you may want to hear some or all of the system speakers playing, or boost the center channel volume slightly. For this purpose, each audio source you use with this system has its own Settings menu, with features appropriate to that source. You can adjust the settings differently for each. Two of the attributes below are available only when the tuner is set to FM. Default Setting; or

AM Features Options Effect of this Setting. Select Stored as the source. <http://brattlandsakeri.se/UserFiles/commando-motherboard-manual.xml>

Stored Default Setting; Effect of this Setting Features Options uMusic Preset 1 or last selected  
Varies with selection of a different preset 1 through 9, number, using the remote control. Three  
attributes shown in italic type below appear in the DVD menu only if you have set Audio Processing  
to User Adjustable in the Audio options of the System menu. There are no separate settings menus  
for these sources. Four attributes shown in italic type below appear in the TV menu only if you have  
set Audio Processing to User Adjustable in the Videooptions of the System menu. If your system  
operates as you want it to, there may be no need for any changes. In some cases, however, changes  
are required to make the system fully compatible with the installation options you have chosen.  
Move right to see a preview of Stored CD features. Press the down button to move into an active  
display of submenus. Track no default; specific to the CD Selection of this item brings up an editing  
screen. May require pressing Enter to see the options. Track Action Edit Selection of this item  
brings up an editing screen. Move to a character and press Enter. Move to the next character and  
press Enter. To place a space between words Spaces appear to the right of the last character in the  
text line. Move to Space bar and press Enter. Move right to see a preview of video features. Press  
the down button to move into an active display of submenus. Figure Important Note DO NOT change  
settings for Com Videopreview ponent video or Progressive scan in the System menu. Move right to  
see a preview of media center features. Press the clown button to move into an active display of  
submenus. Figure Media Center preview Default Settings;. Move right to see a preview of remote  
control. Figure Remote Control preview Default Settings;. Move right to see a preview of DVD Lock  
features. Figure 22 DVD Lock Menu Default Setting;. However, the switches inside the remote  
battery case may be changed as needed, too.

Additional remotes for use in other rooms may need their switches changed, too. See the address and  
phone number list included with your system. See your product registration card for details. Please  
be sure to fill out the information section on the card and mail it to Bose. If your license terminates,  
you agree to cease any and all use of the Technology or Data. Bose, its vendors and licensors reserve  
all rights in the Technology, including all ownership rights. You agree that the vendors and licensors  
of Bose may enforce their rights under this Agreement directly in their own name. Learn more or  
change settings here. Just type your request below Quick tip Try searching for just one or two words  
e.g., connection help. On Off Mute All Mute On Off Mute All Mute. Input On Off. On Off Stored TV.  
Input Rubber feet for cube speakers. On Off. Note You may need other cables and adapters to  
complete your home theater setup. Bose recommends a maximum distance of 3 feet 1 m from the  
edge of the TV screen so that the sound does not become too separated from the picture. You may  
wish to vary this distance based on room conditions and personal preference. Center speaker  
placement. The center speaker sound should seem to come directly from the center of the picture.  
Note For convenience, until your system is completely installed, you may wish to place the media  
center where you have easy access to its rear connection panel. Display window Make sure you can  
see this information while using your system. English. Refer to the Bose address list included with  
your system. Speaker connections to the Acoustimass module Left. Front speakers Center. Right.  
Surround speakers Left Right Power adapter cord To connect to this service, contact your cable TV  
provider for assistance. Note Make sure that the cable radio installation includes a signal splitter so  
that only the FM radio band, not the cable TV band, is received by the media center.

Composite video connection Turn the Acoustimass module POWER switch to on. Power connection for  
the media center. Media center power supply Be sure the power supply cord is fully extended; it  
serves as the remote control antenna. DC power jack. Media center connection panel. Installing the  
remote control batteries. ADAPTiQ calibration headset. English Using the AdaptiQ calibration  
headset. Test the sensor and enable the feature. Cable TV, satellite, or antenna cable TV Figure 21.

VCR connection Connect the VCR to the VIDEO IN jack on the media center. If that jack is unavailable, connect the VCR directly to the TV. Component video connection. Note To make the connections shown in the diagram below, you will need additional cables. Connecting a game console English. Connect a game console directly to an available TV input. See Figure 24. Figure 24. Connecting a game console. See your operating guide for instructions on using the system menus. Figure 27. Digital audio and other media center panel connections. That is, the component is connected to the media center, but placed where it cannot receive the IR signals from the media center. Before using them, refer to instructions in your Operating Guide. Limited warranty. Please try again. Please try your search again later. A new, sleek center channel speaker integrates with the latest flatpanel televisions. And a new, smaller hideaway Acoustimass module produces the deep, powerful low notes that bring action scenes to life. It can digitally store up to 200 hours of music, while the uMusic intelligent playback system learns your taste in music. Amazon calculates a product's star ratings based on a machine learned model instead of a raw data average. The model takes into account factors including the age of a rating, whether the ratings are from verified purchasers, and factors that establish reviewer trustworthiness. Please try again later. It gives you the great quality of a movie theatre.

Bose truly takes a state of the art in entertainment systems to a different level. I have used a pair of Bose 901 series VI reflecting speakers, and is the best you can get. Its 38 series and its awesome. I recommend both, the product and the seller. Product was in the original box all sealed. Were committed to dealing with such abuse according to the laws in your country of residence. When you submit a report, we will investigate it and take the appropriate action. We will get back to you only if we require additional details or have more information to share. Note that email addresses and full names are not considered private information. Please mention this; Therefore, avoid filling in personal details. The manual is 1,89 mb in size. If you have not received an email, then probably have entered the wrong email address or your mailbox is too full. In addition, it may be that your ISP may have a maximum size for emails to receive. Check your email Please enter your email address. View 1 video for the Bose Lifestyle 38 Series III below. VS2 end panel Your Media Center. Preparation Some states do. At our option, we will repair or replace any legal remedy you may provide you may not apply to any legal rights provided to Bose. How you by statute. IN NO EVENT SHALL BOSE BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES. Audio stream and source in use elsewhere Select the stored source and turn on your stored music to another Bose. The following terms are frequently used to search for Bose Lifestyle 38 Series III support Where To Find Them. Please try again. Please try your search again later. You can edit your question or post anyway. Bose link enables up to 14 additional rooms of sound, each with its own independent volume and mute control Easy to enjoy and love If you are a seller for this product, would you like to suggest updates through seller support Amazon calculates a product's star ratings based on a machine learned model instead of a raw data average.

The model takes into account factors including the age of a rating, whether the ratings are from verified purchasers and factors that establish reviewer trustworthiness. My friends tell me one word. its Bose. Sorry, we failed to record your vote. Please try again. Klikk her for a se mer informasjon om hvilke typer informasjonskapsler vi bruker for a endre informasjonskapselinnstillingene dine. Setup disc 2 leads you through the ADAPTiQ audio calibration system process, which adjusts the sound of the system to the acoustics of your listening area. The process takes approximately ten minutes. During this time please try to eliminate any other sounds in the room that could interfere with the acoustic measurements. If there is a component connected to the AUX inputs, temporarily remove those connections Disc 2 will explain the remaining steps for you to follow Please save the ADAPTiQ headset and discs. If you move any of the speakers or furniture, or if you move the system to another room, you will want to perform the procedure again. This will be the same video input that you use when viewing a DVD on the Bose system. To use the

ADAPTiQ system again, you cannot simply turn it back on; you must reinstall it using the ADAPTiQ discs included with the system. Follow the first set of instructions above to reinstall the ADAPTiQ system. Del gjerne ytterligere kommentarer nedenfor. GuidePlease read this owner's guide. Please take the time to follow this guide carefully. It will help you set up and operate your system properly and enjoy. Save both the Installation Guide and the Operation Guide for future reference. **WARNING** To reduce the risk of fire or electric shock, do not expose the system to rain or moisture. **WARNING** This apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases,As with any electronic products, use care not to spill liquids in any part of the system.

**CAUTION** Use of controls or adjustments or performance of procedures other than those specified herein may resultThe compact disc player should not be adjusted or repaired by anyone except properly**CAUTION** No naked flame sources, such as lighted candles, should be placed on the apparatus. Class 1 laser product. The DVD player contained within the media center is classified as a **CLASS 1 LASER PRODUCT**. The **CLASS 1 LASER PRODUCT** label is located on the bottom of the media center.This Class B digital apparatus meets all requirements of the Canadian InterferenceCausing. Equipment Regulations. Batteries. Please dispose of used batteries properly, following any local regulations. Do not incinerate. Additional safety information. See the additional instructions on the Important Safety Instructions sheet enclosed in the shipping carton. Manufactured under license from Dolby Laboratories. "Dolby" and the doubleD symbol are trademarks of Dolby Laboratories. Confidential. All rights reserved.MPEG Layer3 audio compression technology licensed by Fraunhofer IIS and THOMSON multimedia. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. This product incorporates copyright protected technology and other intellectual property rights owned by Cirrus Logic, Inc.Use of this copyright protected technology is limited solelyReverse engineering or disassembly is prohibited.Where to find. Component or progressive scan activating your selection. What makes a LIFESTYLE 38 or 48 system uniquely yours. Tips for getting the most enjoyment from stored tracks.....

To enjoy the remarkable LIFESTYLE 38 or 48 system features. Listening to your stored music available on LIFESTYLE 38 and 48 systems, only. Respond actively to speed up the learning process. Use the Music Library to search, play, or browse your collection.....WelcomeWhat discs you can play. The system can play the following types of discs having the corresponding logos. Check for region number compatibility. For any DVD player and DVD disc to be compatible, their region numbers must match. These numbers are assigned according to where the player and disc are sold. Check the region number on the bottom of the media center included with yourFor example, a Region 1 DVD andGlossary of audio termsFor example, if a TV picture has an aspect ratio of 4:3 read as 4:3The two standard TV aspectCompatible with most televisions and other video components, composite video cables use RCA jacks.Dolby Digital is the most common means of encodingThis is a compressed audio format that allows the recordingEurope.DVDVideo players can use the horizontal offset encoded with. A common form of digital audio signal.This format is not compatible with allRequires the use of an Svideo cableThe remote control pages 7-9 edited to reflect FedX remoteSimply press any button. There is no need to aimNote Not all of the buttons shown on the remote at the left are needed for all systems. Several,Power and mute. Turns the system on and off. Mutes the volume for all connected speakers main and in other rooms. Mutes or unmutes the volume in the current room. Source and input selection.Available with LIFESTYLE 38 and 48 systems only. Turns the system on and selects the builtin disc player as source.Turns the system on and selects an AUX source connected to the media center. Turns the system on and selects the TV connected to the media center asWhen the remote has been set to do so, scrolls the TV inputs to

select one. The input that connects to the media center is one choice.

Turns the system on and selects a cable box or satellite receiver connected to the system. Turns your system on and selects the VCR connected to the media center as the source so it will turn those devices on or off. To do that, refer to "Using your system remote with the media center." Until then, however, simply turn on the TV or component. Menu and program selection. Enters or exits the Settings menu for the current source. Enters or exits the System menu. Enters or exits the menu of the DVD disc that is currently loaded. Enters the main menu of a cable or satellite box. Exits the Settings and System menus. Selects the previous or next item in a menu list. Enters submenus or confirms the selection of a menu item. Move up, down, left, or right in a menu or screen. Seek backward or forward to the next strong radio station. Skip backward or forward to the next CD track, DVD chapter, radio preset. Raise or lower the volume of the current source. Immediately moves on to a different track whenever a negative rating is used. Use to make changes. Displays or exits the cable or satellite information window, if available. Play options. All of the buttons shown below, except Shuffle and Repeat, can be used with your VCR or DVR after the remote has been set to control it. Overrides other stored CD modes. Available with LIFESTYLE 38 and 48 systems only. Queues up and plays stored CD music of a style similar to the current track. Plays the tracks from a specific CD when it is pressed just before pressing the Play button. Plays all the tracks assigned to the playlist. Can be used in conjunction with other modes. Skips from the track most recently playing to the first track on the CD of origin and then continues. Stops the disc player. Note For DVDs and VCDs only, the system remembers the point where the disc was playing. Pauses the disc player. Starts the disc player. Skip back or forward to the start of a track or chapter. Or, when pressed and held, scans back or forward through the tracks. Plays CD tracks in random order. Press Shuffle again to cancel this mode.

Repeats a whole CD or track, DVD chapter, or DVD title. Press Repeat again if the remote does not work as you expect. If your system does not respond when you press a button on the remote, it could be time to replace the batteries. In some buildings, you may experience "dead spots" where the remote control will not work. If these efforts do not work, move the media center away from the wall. If the batteries are fine and the suggestions concerning "dead spots," above do not work, try the following: The media center is too close to the wall. Avoid blocking that emitter, so its signal will have a clear path. Figure 1. Display window. Headphone jack. Front view of the media center. Disc tray. IR emitter. Controls. The media center display window indicates the state of the system, including what source is selected. When Settings menu items or messages appear in the display, they may scroll to reveal information that does not fit in the two lines available. Figure 2. Sample of information that can be displayed. Light indicators. Shuffle. Shows when a CD, MP3 disc, or contents of an MP3 folder are playing. Repeat. Shows when the track or disc playing is set to repeat. Disc. Track. Shows when a track is playing. Store. Lights briefly when a remote control command is received. The nine control buttons work as described below. Source. All Off. Enter. Volume. Turns the system on or off in the main room only. Selects the source. All Off. Turns off the system and all connected speakers in all rooms. Store. Steps through the available source selections. Erase. Begins DVD play when that option appears selected on screen. Works with the Store button to scan through the system settings. Removes a radio station preset. Raises the volume of the system and unmutes the speakers if they were muted. Lowers the volume of the system but does not unmute the source. Copies the tracks from an audio CD to the internal hard drive on the system. When the system is off, resets the remote control house code. Component or progressive scan activating your selection.

If you have used a component video connection between the media center and the TV, you can use the media center turned off, use the controls on its front panel to follow these steps. Selections will appear on the media center display each time you press Enter. Move up and down using the Volume up and down buttons on the media center console. Note The system does not support PAL Progressive video. The system is now ready to deliver the DVD video signal you prefer. Underlying this new feature is the system capacity to store all of the tracks from hundreds of CDs in your



hold Press Genre, Album, Artist. Hear music of one type or by. Press Genre, Artist. Add a selection to the Playlist. Press and hold. Hear your Playlist selections. Press Note For information on the quick adjustments you can make to Stored CD settings, refer Instructions on how to enter the menu to make those Enjoy the added functionality provided by presets added this and next page for FedEx. Enjoying the broad array of your private music collection in powerful, lifelike multispeaker. But to get the very most from this sophisticated, multifaceted feature, you need to set up Why you should rely on them. A stored music preset is where your listening preferences get recorded over time.

Consider When you first select Stored as your source, the system automatically takes you to Preset 1 Figure 3. Preset 1 as indicated on the Notice there's no identifiable order to what plays not by CDs that were stored first, nor by It's more like a freewheeling stream of tracks you may or may not Note You can also name each preset for the person using it. For details on on how to do that, Respond actively to speed up the learning process. If you hear a piece you don't like or are not in the mood for, you have several choices The system moves to the next track, notes your negative response, and gets ready to learn The system logs your strongly negative response and moves to another track immediately. If one track stands out as a favorite. The system logs your response as positive and continues playing the track. You are likely to Choose Playlist when you want a lineup of tracks. The system includes a ready to use playlist, for your selection of specific tracks to play on For example. How to add music to the Playlist provided. While listening to a track in Stored source, press and hold the Playlist button on the remote. Locate selections using the Music Library, then press and hold the Playlist button to add them Or, you can press the Settings menu and compile the entire list without listening. How to delete tracks from the Playlist. Info to come. Not included for Home Eval. Use the Music Library to search, play, or browse your collection But it won't stop running through your head. This is a perfect scenario for using the Music Library. If your system is turned on and the. Stored source is selected Figure 4 Figure 5. Selection. Music Library on screen. Items list. Summary Figure 6. Track located by searching No need to search if you just want info. Whenever you want a reminder of what's playing, simply press the Info button on the remote.